

**KALEIDOSCOPE**  
1.0 (9600 8 N 1)

Commands are repeated out of the serial port to pass to the next controller or device.  
All commands must be terminated with a carriage return. You can use \r for this.

**EPIC KALEIDOSCOPE COMMANDS**  
1.0

| COMMAND   | MODE                       |
|-----------|----------------------------|
| psf       | Kaleidoscope               |
| psl       | Chroma Sweep               |
| psw       | Iridescent White           |
| psvi      | Party Mode                 |
| psp       | Color Wheel                |
| psr       | Red Sparkle                |
| psg       | Green Sparkle              |
| psb       | Blue Sparkle               |
| psm       | Magenta Sparkle            |
| psc       | Cyan Sparkle               |
| psy       | Gold Sparkle               |
| psrd      | Random Strobe              |
| psld      | Solid Color Mode           |
| psdmXXX   | Dim Level Command (1-100%) |
| pspdXXX   | Sparkle Speed Command      |
| psetXXX   | Solid Color Set            |
| pso       | Off                        |
| globaloff | Stars Off                  |
| ptest     | LED Test Mode              |

**EPIC KALEIDOSCOPE BUTTON PROGRAMS**  
1.0

| BUTTON 1 CYCLE | MODE             |
|----------------|------------------|
| psf            | Kaleidoscope     |
| psl            | Chroma Sweep     |
| psw            | Iridescent White |
| psvi           | Party Mode       |
| psp            | Color Wheel      |
| psr            | Red Sparkle      |
| psg            | Green Sparkle    |
| psb            | Blue Sparkle     |
| psm            | Magenta Sparkle  |
| psc            | Cyan Sparkle     |
| psy            | Gold Sparkle     |
| psrd           | Random Strobe    |
|                |                  |
| Button 2       | Off              |

**EPIC KALEIDOSCOPE DIP SWITCH SETTINGS**  
1.0

| MODE             | SWITCH 1 | SWITCH 2 | SWITCH 3 |
|------------------|----------|----------|----------|
| Kaleidoscope     | Up       | Up       | Up       |
| Chroma Sweep     | Down     | Up       | Up       |
| Iridescent White | Up       | Down     | Up       |
| Party Mode       | Down     | Down     | Up       |
| Color Wheel      | Up       | Up       | Down     |
| Red Sparkle      | Down     | Up       | Down     |
| Green Sparkle    | Up       | Down     | Down     |
| Blue Sparkle     | Down     | Down     | Down     |

**NOTE:** DIP Switch 4 up is Full Brightness, down is Dim to 30%